 


User Guide

VC-H4510E/ VC-HT4510E

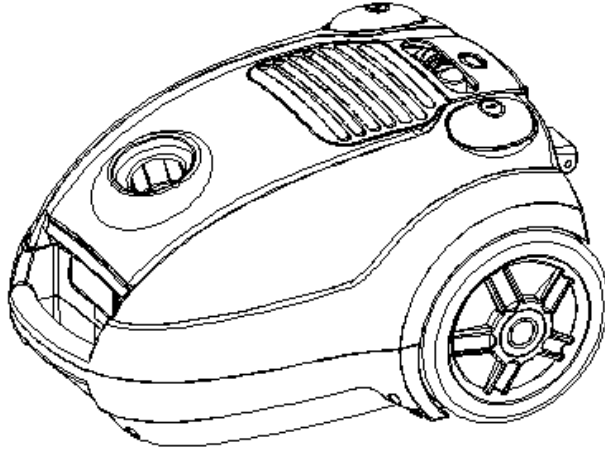

VC-H4510E-1/2/3	~220-240V 50Hz	1600W/1800W/2000W
VC-H4510ES-11/12/13	~220-240V 50Hz	1600W/1800W/2000W
VC-HT4510E-1/2/3	~220-240V 50Hz	1600W/1800W/2000W
VC-HT4510ES-11/12/13	~220-240V 50Hz	1600W/1800W/2000W

Suzhou Kingclean Floorcare Co.,Ltd
Xiang Yang Road,Suzhou New Disrtict,Jiangsu, P.R.China

 
IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING_ To reduce the risk of fire, electric shock, or injury:

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacture's recommend attachments.
5. Do not use with damaged cord or plug. If the vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run the vacuum cleaner over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or the vacuum cleaner with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked, keep free of dust, lint, hair and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging .
12. Use extra care when cleaning on stairs.
13. Do not use to pick up flammable or combustible liquids , such as gasoline ,or use in areas where they may be present .
14. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
15. Unplug before connecting the hose .
16. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
17. Do not use without dust bag and/or filters in place .
- 18.If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.


SAVE THESE INSTRUCTIONS

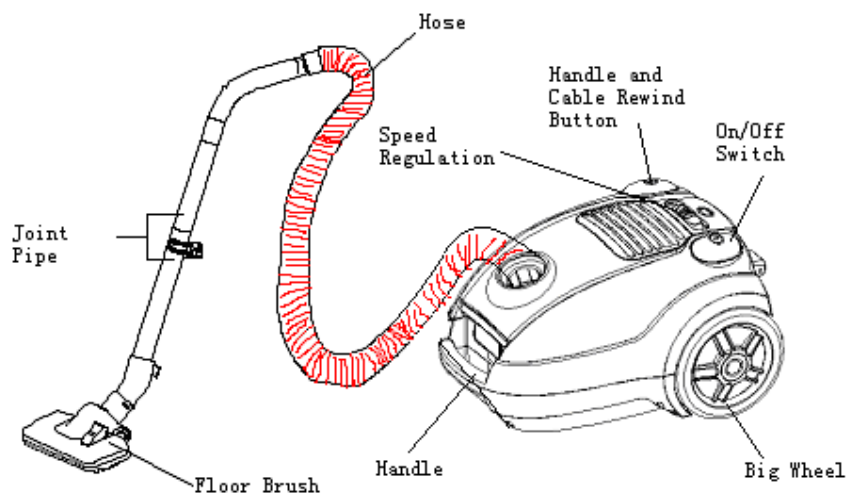


PRECAUTIONARY MEASURES

If the opening that sucks in the air, the suction pipe or the telescopic wand stick on pipe are blocked, you should switch off the vacuum cleaner at once. First clear the blocked substance before you attempt to start the vacuum cleaner again.

 
1. Do not operate the vacuum cleaner too close to heaters and like radiators, cigarette butts etc.

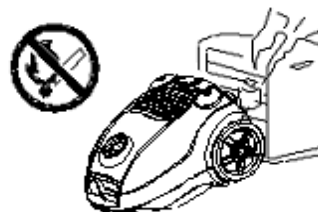

 
2. Before you insert the plug into the wall contact, make sure your hand is dry.

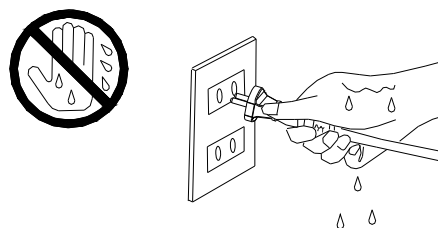

 3. Before you start using the vacuum cleaner, please remove large or sharp objects from the floor in order to prevent that the paper filter is damaged.

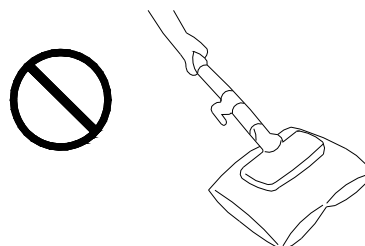

 4. When you want to pull the plug from the wall contact, please do this at the plug itself and not by means of the electrical cable.

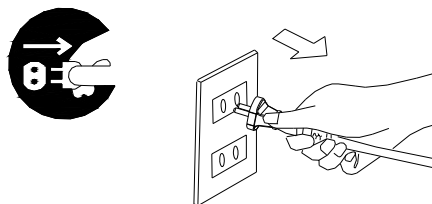

This vacuum cleaner is equipped with a plug and a cable which rolls up automatically. If anything gets damaged, both the plug and the cable must be repaired by a qualified repairman or electrician.

ASSEMBLING VACUUM CLEANER

Always remove the plug from the power socket before fitting or removing accessories!

 
1. Connecting vacuum cleaner

1. Fitting the flexible hose

Insert flexible hose into the air intake duct on the top of appliance. Press until it clicks into position.


Removing the flexible hose:

Removing the plug from the power socket. To release the flexible hose firmly from the air intake duct.

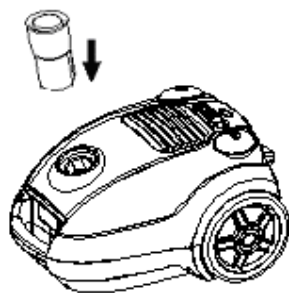


2. Fitting the extension tubes and accessories

 
- a. Fitting the extension tube to the handle.

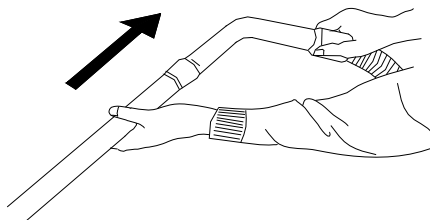

 b. Fitting the extension tubes.

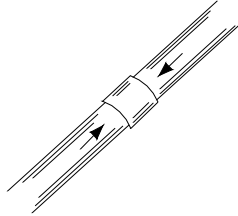


 c. Fitting the brush to the extension tube.

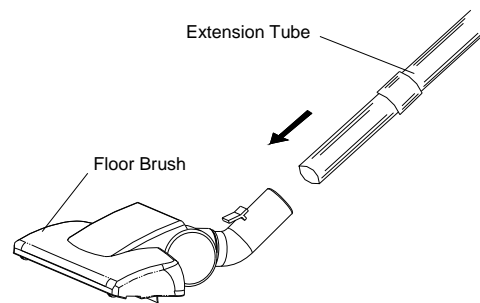


d. Fitting Floor brush

 Ideal for the daily cleaning on carpets and hard floors.

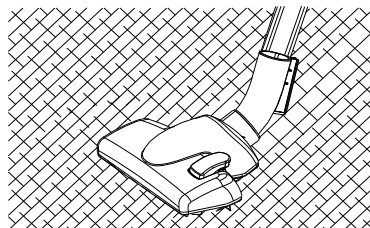

Clean on the carpet

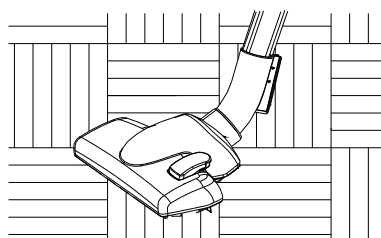 


Clean on the hard floor

2. Cleaning tools use

The crevice tool and dusting brush are stored on the accessories holder.


1. Crevice tool:

 For radiators, crevices, corners, baseboards and between cushions.

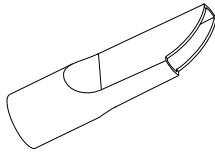

2. Dusting brush, only in addition with crevice tool:

 
For the furniture, venation, blinds, book, lamp shades and shelves.

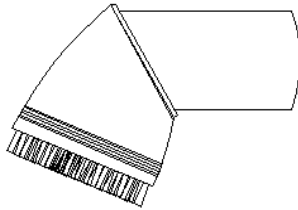


INSTRUCTIONS FOR USE

Before using appliance, unwind a sufficient length of cable and insert the plug into the power socket. A yellow mark on the power cable shows the ideal cable length. Don't extend the cable beyond the red mark.

 1. Press the ON/OFF button to switch the appliance on.

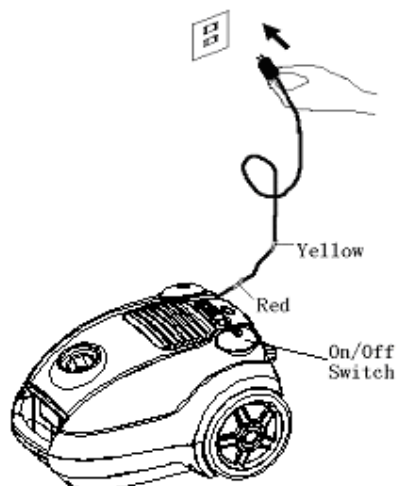

 
2. To rewind the power cable, press the rewind button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage.

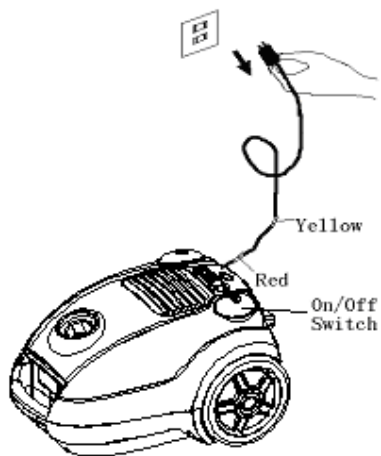

MAINTENANCE

1. Changing of the dust bag

 
- Always operate the cleaner with dust bag installed.
- If you forget to attach the dust bag or attach it in the wrong manner, the dust cover may not close completely.

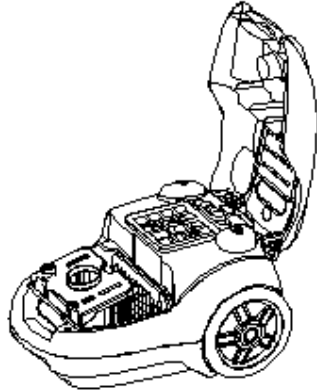

1. After removing the flexible tube, open the front cover .
2. Rotate the support of the bag to the correct position.
3. Remove the dust bag from the Bag Support.
4. Replace the paper bag when it is full of dirt and put in a new one.
5. Close the cover by passing down until it is locked.

2.Spilling rubbish from the dust cup

 - **Always operate the cleaner with the dust compartment subassembly whole installed.**
- **If you forget to attach HEPA and filter or attach its in the wrong manner, the dust compartment subassembly may not rinse.**

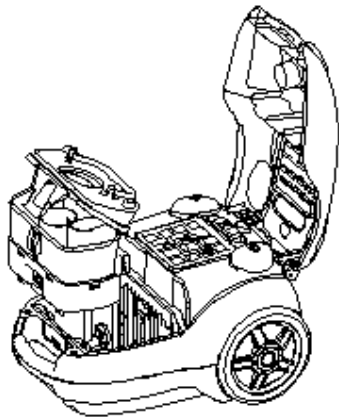


- ① After removing the flexible tube, open the front cover and raise the dust cup's handle.
- ② Take out the dust cup.
- ③ Press the lock of dust cup .
- ④ Carry away the dust cap and Spill rubbish.
- ⑤ Replace the dust compartment subassembly until it is locked.

3.Cleaning and changing filter


- Filter for air-inlet should be cleaned at least twice a year or when it becomes visible solid.
- Always operate the cleaner with filter installed.
- Otherwise, reduced suction or motor damage may be result.
- Disconnect from electrical outlet, before cleaning filter.
- Do not use a washing machine to rinse filter.
- Do not use hair drier to dry it.

 1. Changing filter for air-inlet

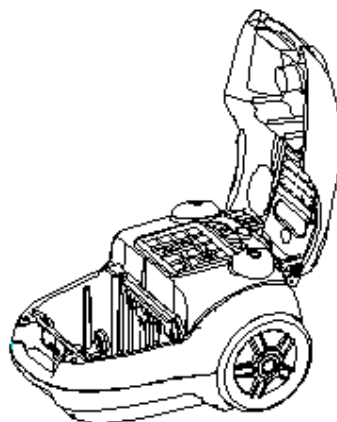

- ① Pull dust bag upward
- ② Remove filter.
- ③ Put the filter back.

 
2. Changing filter for air-outlet

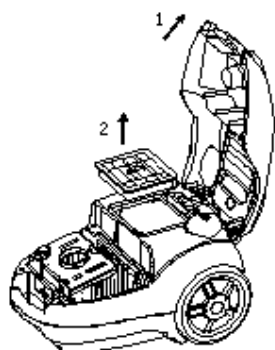

- ① Open the front cover .
- ② When open the front cover, the HEPA for air-outlet is found.

- ③ Take the HEPA out and change a clean one.
- ④ Close the front cover.

 3.Cleaning HEPA

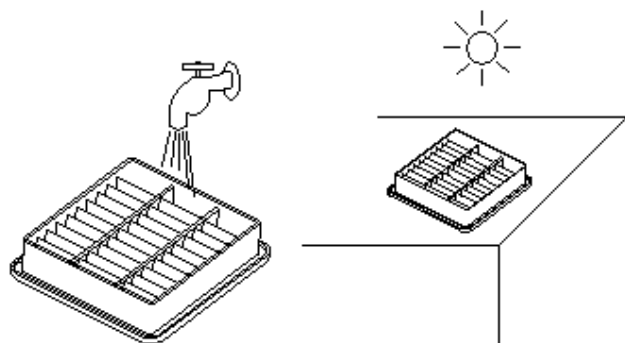

Rinse HAPE in lukewarm water and dry HEPA completely.

Technical Specifications

Type	VC-H4510	VC-HT4510
Rated load (V)	230	230
Rated frequency (Hz)	50	50
Rated input power (W)	2000	2000
Maximal vacuum (Kpa)	24	24
Yawp (dB)	82	82